

Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012

www.piloty-sklep.com.pl



ELMIX-W.LIS 07-07-2016

Layout Keys	TV	
	Brand: AKURA MODEL: ED01FE PART No: 104368	
① POWER		POWER
② MUTE		MUTE
③ PREV/LIST		PREVIOUS PROGRAM
④ NEXT/USB		NICAM
⑤ i+/INFO		INFO
⑥ INPUT/AV		AV/SOURCE
⑦ TIMER/SLEEP		TIMER/SLEEP
⑧ SUBT.		SUBT./NAPISY
⑨ EXPAND/PIP		Aspect, Format
⑩ TEXT/TTX		TEXT/TTX
⑪ EPG		EPG
⑫ REVEAL/PLAY/▶		Text Reveal
⑬ TEXT STOP/■		Text Hold
⑭ INFO/PAUSE/		Text Index
⑮ RED/●		RED
⑯ GREEN/REW/◀		GREEN
⑰ YELLOW		YELLOW
⑱ BLUE/FWD/▶		BLUE
⑲ MENU	MENU	MENU
⑳ UP	▲	UP
㉑ EXIT/CANCEL	EXIT	EXIT/CANCEL
㉒ LEFT	◀	LEFT
㉓ OK	OK	OK
㉔ RIGHT	▶	RIGHT
㉕ SOUND/AUDIO		S.MODE
㉖ DOWN	▼	DOWN
㉗ PICTURE		P.MODE
㉘ VOL+	+V	VOL+
㉙ BACK		Repeat
㉚ CH+	+P	CH+
㉛ VOL-	-V	VOL-
㉜ TV/3D/DTV		DTV/Radio
㉝ CH-	-P	CH-
㉞ 1	1./@	1
㉟ 2	2 abc	2
㊱ 3	3 def	3
㊲ 4	4 ghi	4
㊳ 5	5 jkl	5
㊴ 6	6 mno	6
㊵ 7	7 pqrs	7
㊶ 8	8 tuv	8
㊷ 9	9 wxyz	9
㊸ GUIDE/1./!/-		Time-Shift
㊹ 0	0_	0
㊺ FAV/2./P/C		Favourites