

Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012



Layout Keys	TV	
	Brand:AKAI Model:RC1825 104683	
POWER		POWER
MUTE		MUTE
PREV/LIST	DISPLAY	DISPLAY
NEXT/USB		HDMI
i+/INFO	INFO	INFO
INPUT/AV	SOURCE	AV/SOURCE
TIMER/SLEEP	SLEEP	TIMER/SLEEP
SUBT.		SUBT./NAPISY
EXPAND/PIP	LANG.	LANG
TEXT/TTX		TEXT/TTX
EPG	EPG	EPG
REVEAL/PLAY/▶	C	C
TEXT STOP/■		STOP
INFO/PAUSE/		INTERNET
RED/●		RED
GREEN/REW/◀		GREEN
YELLOW		YELLOW
BLUE/FWD/▶		BLUE
MENU	MENU	MENU
UP	▲	UP
EXIT/CANCEL	EXIT	EXIT/CANCEL
LEFT	◀	LEFT
OK	OK	OK
RIGHT	▶	RIGHT
SOUND/AUDIO	SEARCH MODE	SEARCH MODE
DOWN	▼	DOWN
PICTURE	SCREEN	SCREEN
VOL+	+V	VOL+
BACK		SWAP
CH+	+P	CH+
VOL-	-V	VOL-
TV/3D/DTV		MEDIA
CH-	-P	CH-
1	1./@	1
2	2 abc	2
3	3 def	3
4	4 ghi	4
5	5 jkl	5
6	6 mno	6
7	7 pqrs	7
8	8 tuv	8
9	9 wxyz	9
GUIDE/1./-/-	PRESETS	PRESETS
0	0_	0
FAV/2./P/C	FAV	FAV