

## Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012

www.piloty-sklep.com.pl



Layout Keys	TV	
	BRAND:THOMSON MODEL:RC309 NR KAT:103547	
POWER		POWER
MUTE		MUTE
PREV/LIST	LIST	LIST.CH
NEXT/USB	@/🏠	HOME/SMART TV
i+/INFO	INFO	INFO
INPUT/AV	SOURCE	AV/SOURCE
TIMER/SLEEP	SLEEP	TIMER/SLEEP
SUBT.	SUBTITLE	SUBT./NAPISY
EXPAND/PIP	Smart TV	SMART TV
TEXT/TTX	TEXT	TEXT
EPG	EPG	EPG
REVEAL/PLAY/▶	OPTION	OPTION
TEXT STOP/■	LANG.	LANGAGUE
INFO/PAUSE/	ECO	ECO
RED/●		RED
GREEN/REW/◀		GREEN
YELLOW		YELLOW
BLUE/FWD/▶		BLUE
MENU	MENU	MENU
UP	▲	UP
EXIT/CANCEL	EXIT	EXIT/CANCEL
LEFT	◀	LEFT
OK	OK	OK
RIGHT	▶	RIGHT
SOUND/AUDIO	ZOOM-	ZOOM-
DOWN	▼	DOWN
PICTURE	ZOOM+	ZOOM+
VOL+	+V	VOL+
BACK		PRE-CH
CH+	+P	CH+
VOL-	-V	VOL-
TV/3D/DTV		3D
CH-	-P	CH-
1	1./@	1
2	2.abc	2
3	3.def	3
4	4.ghi	4
5	5.jkl	5
6	6.mno	6
7	7.pqrs	7
8	8.tuv	8
9	9.wxyz	9
GUIDE/1./!/--	GUIDE	GUIDE.
0	0._	0
FAV/2./P/C	FAV	FAV