

Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012

www.piloty-sklep.com.pl



ELMIX-W.LIS 05-07-2016

Layout Keys	TV	
	Brand: AEG MODEL: RC6002 PART No: 104772	
① POWER		POWER
② MUTE		MUTE
③ PREV/LIST		LCD Setup
④ NEXT/USB		DVB-T Mode
⑤ i+/INFO		i+/INFO
⑥ INPUT/AV		AV/SOURCE
⑦ TIMER/SLEEP		DVD/DVB Setup
⑧ SUBT.		DVD Subtitle
⑨ EXPAND/PIP		TV/Radio, DVD A-B
⑩ TEXT/TTX		Time
⑪ EPG		EPG, DVD Title
⑫ REVEAL/PLAY/▶		Set
⑬ TEXT STOP/■		DVD Zoom
⑭ INFO/PAUSE/		DVD Goto
⑮ RED/●		RED
⑯ GREEN/REW/◀		GREEN
⑰ YELLOW		YELLOW
⑱ BLUE/FWD/▶		BLUE
⑲ MENU	MENU	MENU
⑳ UP	▲	UP
㉑ EXIT/CANCEL	EXIT	EXIT/CANCEL
㉒ LEFT	◀	LEFT
㉓ OK	OK	OK
㉔ RIGHT	▶	RIGHT
㉕ SOUND/AUDIO		AM/FM
㉖ DOWN	▼	DOWN
㉗ PICTURE		LCD On/Off
㉘ VOL+	+V	VOL+
㉙ BACK		DVD Repeat
㉚ CH+	+P	CH+
㉛ VOL-	-V	VOL-
㉜ TV/3D/DTV		DVD Eject
㉝ CH-	-P	CH-
㉞ 1	1./@	1
㉟ 2	2 abc	2
㊱ 3	3 def	3
㊲ 4	4 ghi	4
㊳ 5	5 jkl	5
㊴ 6	6 mno	6
㊵ 7	7 pqrs	7
㊶ 8	8 tuv	8
㊷ 9	9 wxyz	9
㊸ GUIDE/1./!/-		+10
㊹ 0	0_	0
㊺ FAV/2./P/C		Favourites