

Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012



Layout Keys	TV	
	Brand:TELEFUNKEN Model:RC4865 100046	
POWER		POWER
MUTE		MUTE
PREV/LIST	PRESETS	PRESETS
NEXT/USB		MEDIA
i+/INFO		INTERNET
INPUT/AV		AV/SOURCE
TIMER/SLEEP		TIMER/SLEEP
SUBT.		SUBT./NAPISY
EXPAND/PIP		TV
TEXT/TTX		TEXT/TTX
EPG		EPG
REVEAL/PLAY/▶	★/Q	MY BUTTON 1
TEXT STOP/■	★/Q	MY BUTTON 2
INFO/PAUSE/		INFO
RED/●		RED
GREEN/REW/◀		GREEN
YELLOW		YELLOW
BLUE/FWD/▶		BLUE
MENU	MENU	MENU
UP	▲	UP
EXIT/CANCEL	EXIT	EXIT/CANCEL
LEFT	◀	LEFT
OK	OK	OK
RIGHT	▶	RIGHT
SOUND/AUDIO		EKRAN
DOWN	▼	DOWN
PICTURE	BACK	BACK
VOL+	+V	VOL+
BACK		SWAP
CH+	+P	CH+
VOL-	-V	VOL-
TV/3D/DTV	Q.MENU	Q.MENU
CH-	-P	CH-
1	1./@	1
2	2 abc	2
3	3 def	3
4	4 ghi	4
5	5 jkl	5
6	6 mno	6
7	7 pqrs	7
8	8 tuv	8
9	9 wxyz	9
GUIDE/1./-/-	LANG.	LANG.
0	0 _	0
FAV/2./P/C		FAV