

## Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012

www.piloty-sklep.com.pl



ELMIX-W.LIS 29-06-2016

Layout Keys	TV	
	Brand: BLAUPUNKT MODEL: RMC0019 PART No: 102976	
① POWER		POWER
② MUTE		MUTE
③ PREV/LIST		Record List
④ NEXT/USB		USB Mode
⑤ i+/INFO		INFO
⑥ INPUT/AV		AV/SOURCE
⑦ TIMER/SLEEP		TIMER/SLEEP
⑧ SUBT.		SUBT./NAPISY
⑨ EXPAND/PIP		ATV Mode
⑩ TEXT/TTX		Text, DVD Setup
⑪ EPG		DVD Eject
⑫ REVEAL/PLAY/▶		PLAY
⑬ TEXT STOP/■		STOP
⑭ INFO/PAUSE/		Text Index, DVD Menu
⑮ RED/●		Red, DVD Goto
⑯ GREEN/REW/◀		Green, DVD A-B
⑰ YELLOW		Yellow, DVD Angle
⑱ BLUE/FWD/▶		Blue, DVD Repeat
⑲ MENU	MENU	MENU
⑳ UP	▲	UP
㉑ EXIT/CANCEL	EXIT	EXIT/CANCEL
㉒ LEFT	◀	LEFT
㉓ OK	OK	OK
㉔ RIGHT	▶	RIGHT
㉕ SOUND/AUDIO		Audio Language, I/II
㉖ DOWN	▼	DOWN
㉗ PICTURE		Display Off
㉘ VOL+	+V	VOL+
㉙ BACK		Previous Programme
㉚ CH+	+P	CH+
㉛ VOL-	-V	VOL-
㉜ TV/3D/DTV		TV/RADIO
㉝ CH-	-P	CH-
㉞ 1	1./@	1
㉟ 2	2 abc	2
㊱ 3	3 def	3
㊲ 4	4 ghi	4
㊳ 5	5 jkl	5
㊴ 6	6 mno	6
㊵ 7	7 pqrs	7
㊶ 8	8 tuv	8
㊷ 9	9 wxyz	9
㊸ GUIDE/1./!/-		GUIDE
㊹ 0	0_	0
㊺ FAV/2./P/C		Favourites