

Zamiennik pilota model 135364 Setting Table

ELMIX. W-LIS

00-138 WARSZAWA PL.MIROWSKI 1/30

tel. 602237012,e-mail:piloty-sklep@wp.pl



Layout Keys	TV
	Brand:GERICOM Model:135364
	Code Name
POWER	POWER
MUTE	MUTE
PREV/LIST	DTV Setup
NEXT/USB	PC
i+/INFO	INFO
INPUT/AV	Source
TIMER/SLEEP	TIMER/SLEEP
SUBT.	Tone I/I
EXPAND/PIP	PIP
TEXT/TTX	TEXT
EPG	DTV Guide
REVEAL/PLAY	S.Select
TEXT STOP	Still
INFO/PAUSE	TextList
RED	RED
GREEN/REW	GREEN
YELLOW	YELLOW
BLUE/FWD	BLUE
MENU	MENU
UP	UP
EXIT/CANCEL	EXIT
LEFT	LEFT
OK	OK
RIGHT	RIGHT
SOUND/AUDIO	S.MODE
DOWN	DOWN
PICTURE	P.MODE
VOL+	VOL+
BACK	Previous Pro
CH+	CH+
VOL-	VOL-
TV/3D/DTV	TV
CH-	CH-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
GUIDE/1./-/-	-/-
0	0
FAV/2./P/C	DTV Fav.