

Replacment Remote Control RC01010 Setting Table

ELMIX W-LIS

00-138 Warszawa Pl. Mirowski 1/30

602 237 012, piloty-sklep@wp.pl



Layout Keys	TV
	Brand:SENCOR Model:RC01010
	Code Name
POWER	POWER
MUTE	MUTE
PREV/LIST	RECLIST
NEXT/USB	MEDIA
i+/INFO	DISPLAY
INPUT/AV	SOURCE
TIMER/SLEEP	TIMER/SLEEP
SUBT.	SUBT.
EXPAND/PIP	ASPECT
TEXT/TTX	TEXT/TTX
EPG	EPG
REVEAL/PLAY	REVEAL
TEXT STOP	TEXT STOP
INFO/PAUSE	INDEX
RED	RED
GREEN/REW	GREEN
YELLOW	YELLOW
BLUE/FWD	BLUE
MENU	MENU
UP	UP
EXIT/CANCEL	EXIT
LEFT	LEFT
OK	OK
RIGHT	RIGHT
SOUND/AUDIO	S.MODE
DOWN	DOWN
PICTURE	P.MODE
VOL+	VOL+
BACK	BACK
CH+	CH+
VOL-	VOL-
TV/3D/DTV	TV/RADIO
CH-	CH-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
GUIDE/1./1/--	AUDIO I-II
0	0
FAV/2./P/C	FAV