

## Remote Control -TV Setting Table

ELMIX-W.LIS

00-138 Warszawa Pl. Mirowski 1/30 NIP:5261016149

Contact: piloty-sklep@wp.pl / Tel 602237012

www.piloty-sklep.com.pl



ELMIX-W.LIS 20-06-2016

Layout Keys	TV	
	Brand: SAMSUNG MODEL:AA59-00622A PART No:103875	
① POWER		POWER
② MUTE		MUTE
③ PREV/LIST		CH.LIST
④ NEXT/USB		CONTENT
⑤ i+/INFO		Info, Text Reveal
⑥ INPUT/AV		Source, Text Mode
⑦ TIMER/SLEEP		No Function
⑧ SUBT.		AD/SUBT
⑨ EXPAND/PIP		PIP
⑩ TEXT/TTX		TEXT/MIX
⑪ EPG		No Function
⑫ REVEAL/PLAY/▶		PLAY
⑬ TEXT STOP/■		STOP
⑭ INFO/PAUSE/		PAUSE
⑮ RED/●		Red, A
⑯ GREEN/REW/◀		Green, B
⑰ YELLOW		Yellow, C
⑱ BLUE/FWD/▶		Blue, D
⑲ MENU	MENU	MENU/INDEX
⑳ UP	▲	UP
㉑ EXIT/CANCEL	EXIT	EXIT, Update
㉒ LEFT	◀	LEFT
㉓ OK	OK	OK
㉔ RIGHT	▶	RIGHT
㉕ SOUND/AUDIO		Tools, Text Size
㉖ DOWN	▼	DOWN
㉗ PICTURE		P.SIZE
㉘ VOL+	+V	VOL+
㉙ BACK		RETURN
㉚ CH+	+P	CH+
㉛ VOL-	-V	VOL-
㉜ TV/3D/DTV		No Function
㉝ CH-	-P	CH-
㉞ 1	1./@	1
㉟ 2	2 abc	2
㊱ 3	3 def	3
㊲ 4	4 ghi	4
㊳ 5	5 jkl	5
㊴ 6	6 mno	6
㊵ 7	7 pqrs	7
㊶ 8	8 tuv	8
㊷ 9	9 wxyz	9
㊸ GUIDE/1./!/-		GUIDE
㊹ 0	0_	0
㊺ FAV/2./P/C		PRE-CH