

Replacment Remote Control RC01008 Setting Table

ELMIX W-LIS

00-138 Warszawa Pl. Mirowski 1/30

602 237 012, piloty-sklep@wp.pl



Layout Keys	TV
	Brand:SENCOR Model:RC01008
	Code Name
POWER	POWER
MUTE	MUTE
PREV/LIST	LIST
NEXT/USB	
i+/INFO	INFO
INPUT/AV	SOURCE
TIMER/SLEEP	SLEEP
SUBT.	SUBTITLE
EXPAND/PIP	FORMAT
TEXT/TTX	TEXT
EPG	EPG
REVEAL/PLAY	REC
TEXT STOP	STOP/STILL
INFO/PAUSE	INDEX
RED	RED/REW
GREEN/REW	GREEN/FF
YELLOW	YELLOW/S.REW
BLUE/FWD	BLUE/S.FWD
MENU	MENU
UP	UP
EXIT/CANCEL	EXIT
LEFT	LEFT
OK	OK
RIGHT	RIGHT
SOUND/AUDIO	AUDIO I-II
DOWN	DOWN
PICTURE	
VOL+	VOL+
BACK	BACK
CH+	CH+
VOL-	VOL-
TV/3D/DTV	RADIO
CH-	CH-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
GUIDE/1./-/--	
0	0
FAV/2./P/C	FAV/SERCE